


Change Height of a Room


This Guide will teach you how to change the height of a room.

1. Click on the floor of the room.
2. Slide the “Match to Main Floor Height” slider to the left (to turn off).
3. Input the height of the room in the “Room Height” field.

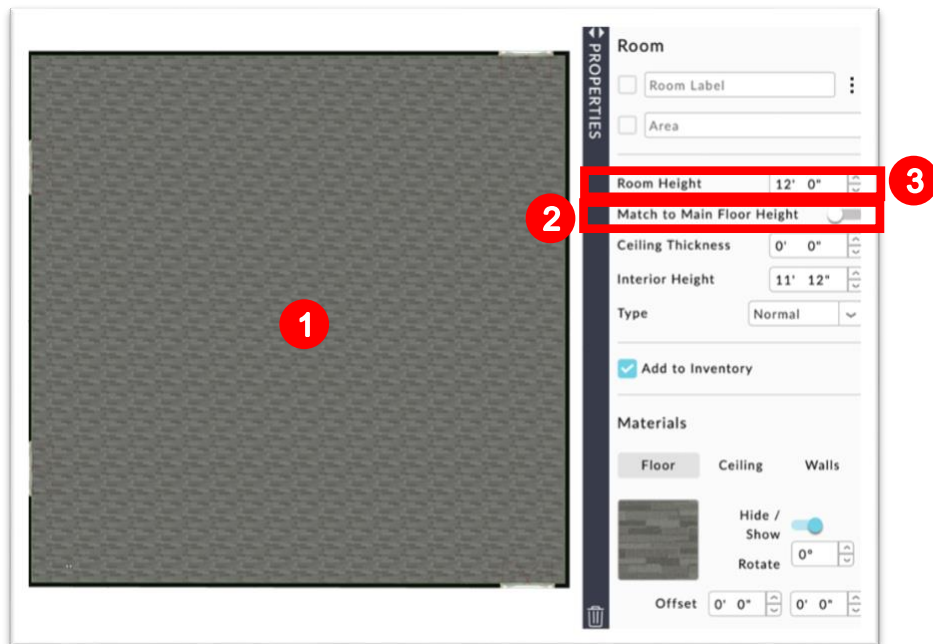


Note: If you cannot increase the height of your space, you will need to adjust the “Main Floor” height. To do this:

4. Click on “Main Floor” from the navigation bar.
5. Click Configure.

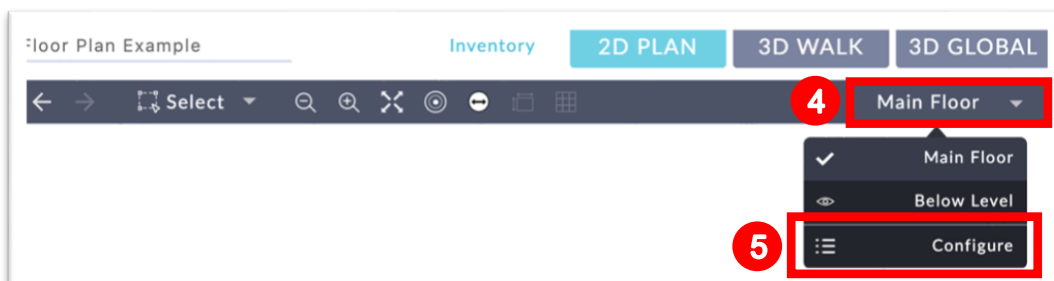

6. Input the desired height.
7. Click the "Close" button.

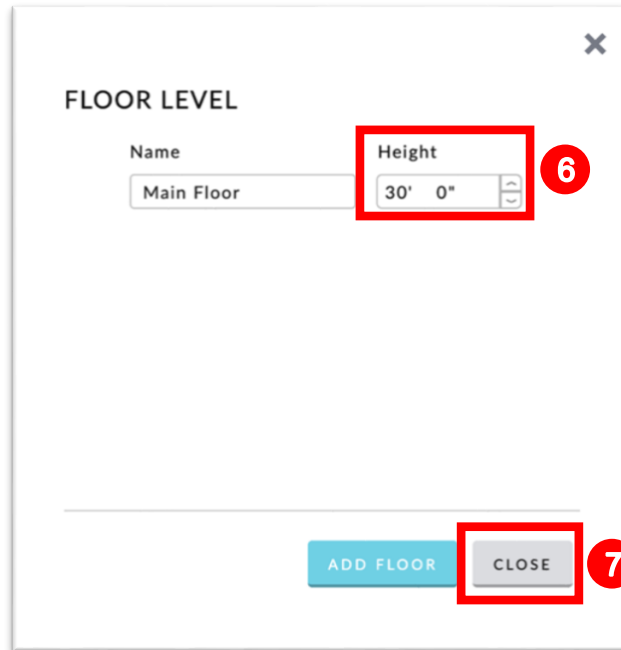

The screenshot shows a dialog box titled "FLOOR LEVEL" with a close button (X) in the top right corner. It contains two input fields: "Name" with the value "Main Floor" and "Height" with the value "30' 0\". Below the input fields are two buttons: "ADD FLOOR" and "CLOSE". Red boxes and numbers highlight the "Height" field (6) and the "CLOSE" button (7).